

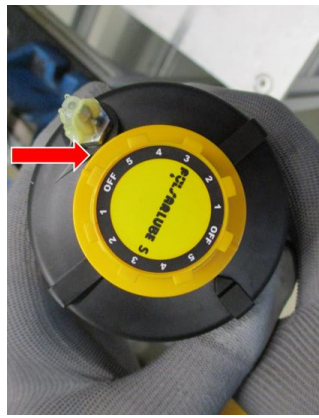

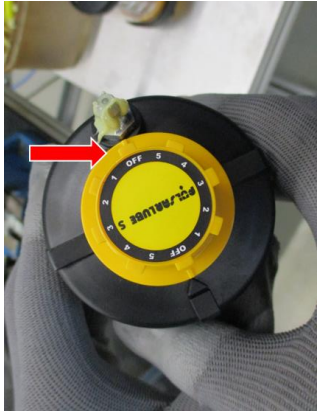




## Grease filling instructions for Pulsarlube S Model

### 1) How to fill grease

<p><b>1</b></p> 	<p><b>2</b></p> 	<p><b>3</b></p> 
<p>Connect the S model to the grease coupling.</p>	<p>First, fill with enough grease so that the bottom of the piston is in the first compartment. (Primary filling to remove air inside the product).</p>	<p>Set the control knob to 5 and press out the filled grease again.</p>
<p><b>4</b></p> 	<p><b>5</b></p> 	<p><b>5</b></p> 
<p>Make sure the piston rises to its original position.</p>	<p>After checking the piston position, turn the control knobs, OFF.</p>	<p>Fill the grease only up to the line <b>"Do not fill below the line"</b>. <b>If overfilled, the product can be damaged. Be careful when filling.</b></p>
<p><b>6</b></p> 		
<p>Assemble the piston holder using a tool/pliers.</p>		

## TECHNICAL INFORMATION

## NOTE

- ◆ If too much fat is filled and the limit is exceeded, product damage may occur.
- ◆ When adding grease, if there is an air pocket in the grease, it will not cause a problem in the operation of the product.



Image of Air Pockets /Air Pocket Image